

The gate won't move The gate opened and now it won't close The gate won't move or it won't close after opening Disconnect and test battery voltage in the battery harness (female pins), If ...